

EZ Clean

WIPES FOR LENS CLEANING

Specially Designed for Cleaning High Power CO₂ Laser Lenses



CONTAINS:

24 Lens cleaning wipes.

HEALTH HAZARD INFORMATION

for health hazard information, please refer to MSDS.



Warning: Cleaning liquid is flammable;
keep package away from hot surfaces



www.ophiropt.com



A Cut Above the Rest

LENS CLEANING INSTRUCTIONS USING EZ CLEAN WIPES



Step 1: Separate one wipe




Step 2: Take out the folded wipe



Step 5: Turn the wipe to the other side



Step 3: Using an "S" motion, wipe from top to bottom

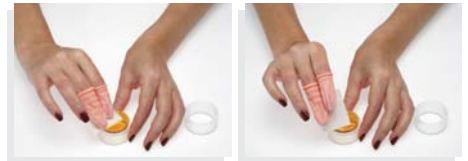

Step 6: Using an "S" motion, wipe from top to bottom



Step 4: Turn the lens upside down



Step 7: Properly dispose the wipe and package