

# EZ Clean

## WIPES FOR LENS CLEANING

Specially Designed for Cleaning High Power CO<sub>2</sub> Laser Lenses



### CONTAINS:

24 Lens cleaning wipes.

### HEALTH HAZARD INFORMATION

for health hazard information, please refer to MSDS.



Warning: Cleaning liquid is flammable;  
keep package away from hot surfaces



[www.ophiropt.com](http://www.ophiropt.com)



## A Cut Above the Rest

# LENS CLEANING INSTRUCTIONS USING EZ CLEAN WIPES



Step 1: Separate one wipe




Step 2: Take out the folded wipe



Step 5: Turn the wipe to the other side



Step 3: Using an "S" motion, wipe from top to bottom

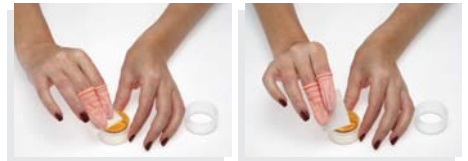

Step 6: Using an "S" motion, wipe from top to bottom



Step 4: Turn the lens upside down



Step 7: Properly dispose the wipe and package